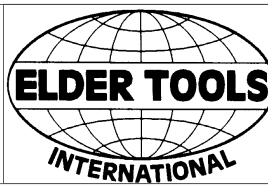


ELDER TOOLS INTERNATIONALP.O. Box 111
TX 77954Tel: 361-275-5600 Cuero,
Fax: 361-275-6700Web Site: <http://www.eldertools.com>
Email: oiltools@eldertools.com**Spring Loaded Retrieving Tool
for 9-5/8”
‘ETI-ASRT’**

9.625” Spring Loaded Retrieving Tool

The Spring Loaded Retrieving Tool is used to retrieve the AS Bridge Plug. It is available with different shoes as well as many sizes.

OPERATING PROCEDURE

Run in and set AS Bridge Plug

Attach Retrieving tool to the AS Bridge Plug pulling head. Run tool to desired depth and set Bridge Plug normally. Set down applying left hand torque to come off the Bridge Plug.

Retrieving AS Bridge Plug

Run to the depth of the Bridge Plug. Retrieving tool will connect to pulling head automatically. Retrieve Bridge Plug normally.

CASING	PRODUCT NUMBER	AVAILABLE SHOES	OD OF TOOL
SIZE (IN)			
9-5/8”	57795-TO	57795316	8.25”

* Tools listed are left hand release.

NOTE: Most of the component parts are manufactured from heat treated alloy steel. Therefore, extended exposure to corrosives can be detrimental to the metallurgy. Care in cleaning the tool soon after removal from the well can help extend the life of component parts. Close inspection of the parts is necessary, after removal, to identify any parts which require replacement.

DISASSEMBLY

- 1.) Remove set screws (6) from top and bottom of tool.
- 2.) Remove milling shoe (3) and top sub (1).
- 3.) Remove Spring (5) and spring plunger (4).

ITEM	QTY	PART NUMBER	DESCRIPTION	MATERIAL
1	1	57785610	TOP SUB	P-110
2	1	57785315-TO	J-BODY WELDMENT	
3	1	57795316	MILLING SHOE	P-110
4	1	57785910	SPRING PLUNGER	P-110
5	1	60373920CV	FOLLOWER SPRING	CHROME VANADIUM
6	5	SSS037C037	STEEL SET SCREW 3/8-16 X 1/2	Steel

ELDER TOOLS INTERNATIONAL
P.O. Box 111 Tel: 361-275-5600 Cuero,
TX 77954 Fax: 361-275-6700
Web Site: <http://www.eldertools.com>
Email: oiltools@eldertools.com



**Spring Loaded Retrieving Tool
for 9-5/8"**
'ETI-ASRT'

